



How to auto connect camera to the monitor

1. Put in external static IP address to the decoder
2. Download *nvrncfg.ini* from the decoder
3. Put in the IP of an encoder under the proper input that you want to connect in the format shown below, where the number after ':' indicates a video stream
4. Save and Put to the unit
5. Restart the unit and when the unit comes up, it should show the video on the analog monitor

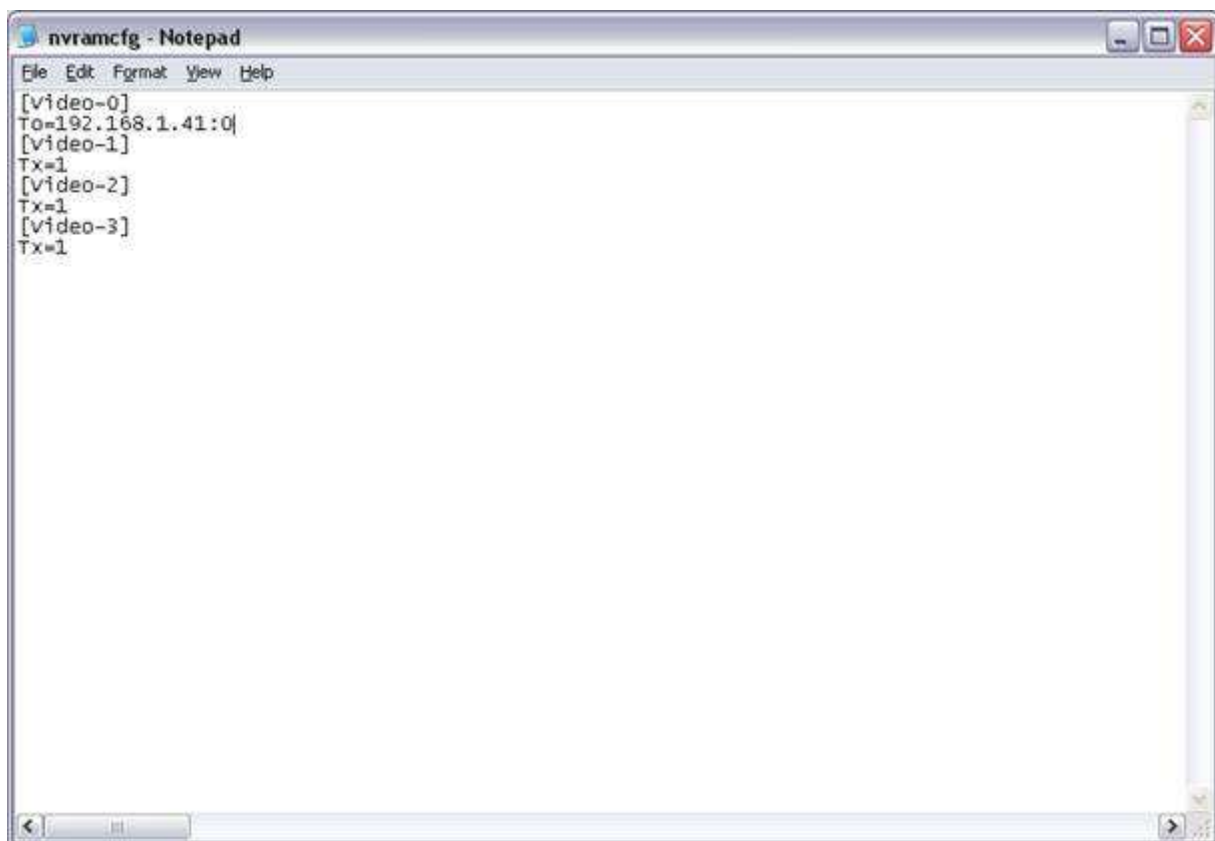

```
nvrncfg - Notepad
File Edit Format View Help
[video-0]
To=192.168.1.41:0
[video-1]
Tx=1
[video-2]
Tx=1
[video-3]
Tx=1
```

OR for the newer versions of the firmware:

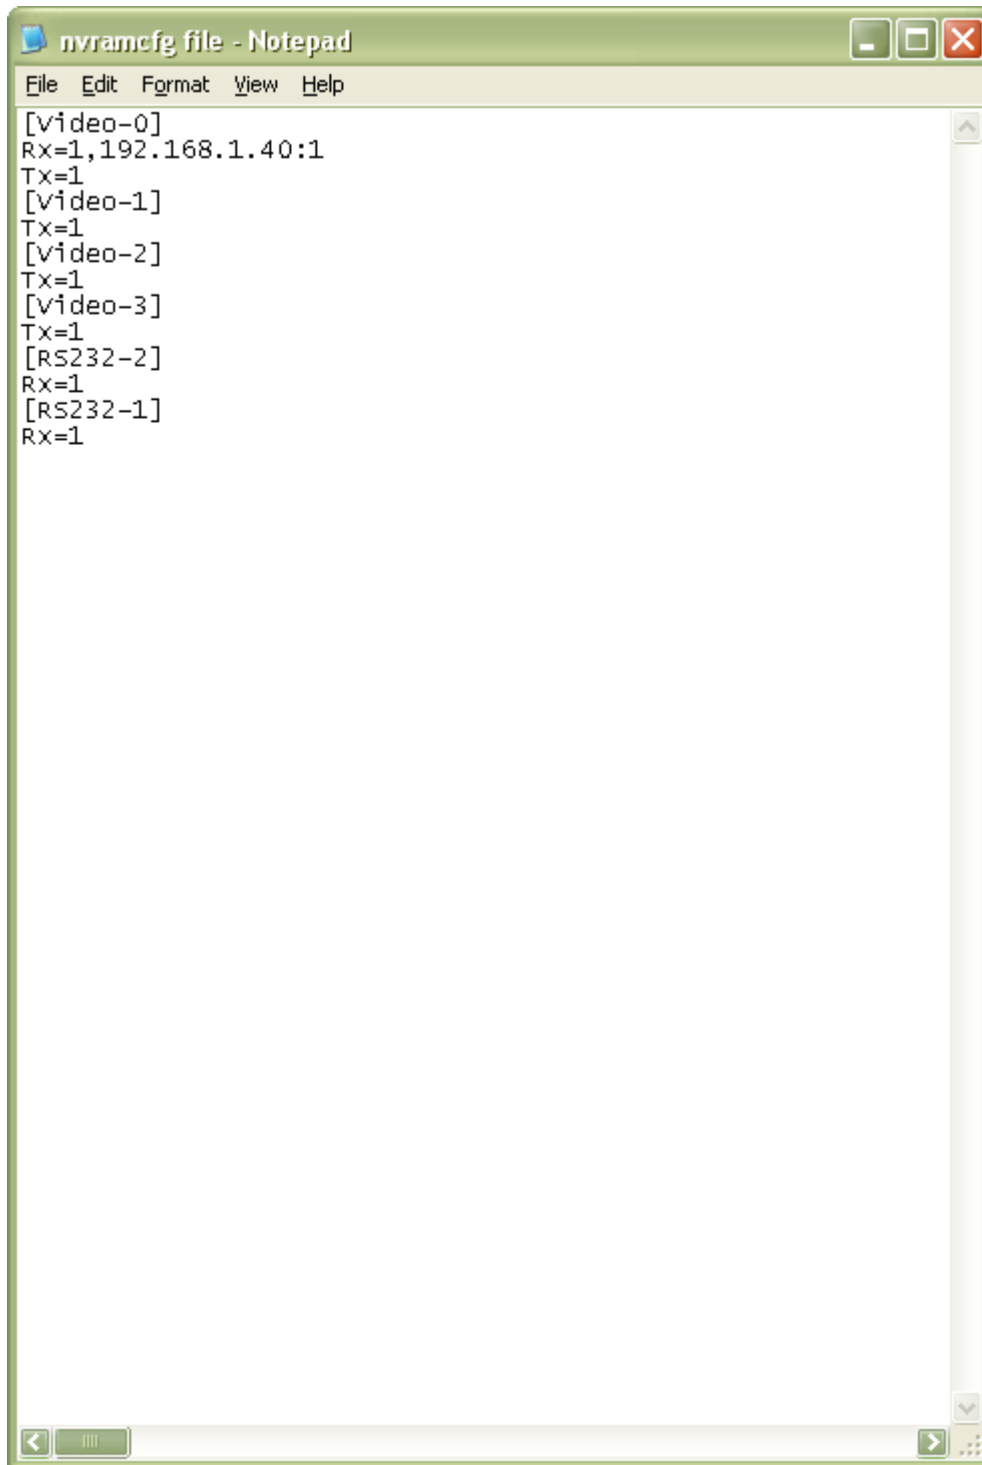

```
nvramcfg file - Notepad
File Edit Format View Help
[video-0]
Rx=1,192.168.1.40:1
Tx=1
[video-1]
Tx=1
[video-2]
Tx=1
[video-3]
Tx=1
[RS232-2]
Rx=1
[RS232-1]
Rx=1
```