



WHAT PORTS DOES THE MEDIARACER USE?

1) Mediaracer Ports:

Command :	UDP 1000 (send/receive) (unicast)
Video Stream:	UDP 3000 (send/receive) (unicast and multicast)
Audio Stream:	UDP 3001 (send/receive) (unicast and multicast)
RS232 Stream:	UDP 3002 (send/receive) (unicast)
DIO Stream:	UDP 3003 (send/receive) (unicast)
Direct RS232 Access:	TCP 14001/14002 (can be change in taskman.ini)
Telnet	TCP 23
NTP:	UDP 123
FTP:	TCP 21

2) MAVIX API/Application Ports:

Command : use the first free port in the UDP range from 1000 to 1007
(send/receive) (unicast)

3) Input Video Stream: UDP dynamic port (send / receive) (unicast/multicast) range from 1024 to 5000